



819 North Milwaukee Ave., Chicago, IL, 60622
Phone: 312.787.7795 Fax: 773.751.0683

SFX Backup to CD

- Place blank CD-R into CD-RW
- Press the **SEARCH** button on the front panel
- Enter **OK** while keeping the password blank
- From the "Intelli-Search" screen, select **BACKUP**
- Select backup mode **VIDEO(SFX)**
- Enter start time (use arrow keys and joggle wheel to adjust time)
- **Make sure to keep archive under 15 minutes**
- Enter end time (use arrow keys and joggle wheel to adjust time)
- Select media (**LOCAL CD-RW**)
- Select the camera # that you would like to record (select only one)
- Review selections for accuracy
- Select **OK** then select **CANCEL**

A status bar will show up on the top middle of the screen to notify you the DVR is processing to the CD-RW; the CD will eject when backup is finalized

- The burning process will take up to 30 minutes